



Mapex Quantum Bass Drum Drum Slip™ Installation Instructions

The instructions in this document apply to the following current model
Mapex Quantum marching bass drums:

- 14"x14" (ON2 Percussion Drum Slip ID: MBQN014)
- 16"x14" (ON2 Percussion Drum Slip ID: MBQN016)
- 18"x14" (ON2 Percussion Drum Slip ID: MBQN018)
- 20"x14" (ON2 Percussion Drum Slip ID: MBQN020)
- 22"x14" (ON2 Percussion Drum Slip ID: MBQN022)
- 24"x14" (ON2 Percussion Drum Slip ID: MBQN024)
- 26"x14" (ON2 Percussion Drum Slip ID: MBQN026)
- 28"x14" (ON2 Percussion Drum Slip ID: MBQN028)
- 30"x16" (ON2 Percussion Drum Slip ID: MBQN030)
- 32"x16" (ON2 Percussion Drum Slip ID: MBQN032)

**It is highly recommended that you read through this entire
document *BEFORE* attempting to install Drum Slips™.**

Copyright © 2013 ON2 Percussion®
DRUM SLIPS™ ARE PATENT PENDING
Drum Slips™ is a registered trademark of ON2 Percussion
ON2 Percussion is not affiliated with Mapex
www.on2percussion.com

Step One: Preparing Your Drum for Drum Slips™




Continue to the installation process.

Step Two: Installing Drum Slips™

3

Open and unroll Drum Slip.

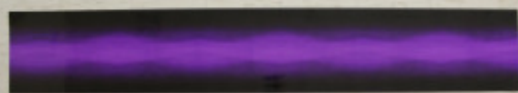

4

Lay Drum Slip on top of the drum.



5

Starting at the carrier hooks, begin pressing down on the Drum Slip on corresponding hardware perforations for quick installation.



6

Continue this process around the entire drum. Slide wings under lug casing post.



7

Using included tape runner, stick the two ends of the Drum Slip together very tightly. *Do not stretch Drum Slip.*



8

If the Drum Slip warps when pinched, it will **NOT** install correctly.





9

The Drum Slip should not warp when pinched; it should fit flush to shell with little or no play.



Continue to Installation Finalization

Step Three: Finalizing the installation of Drum Slips™

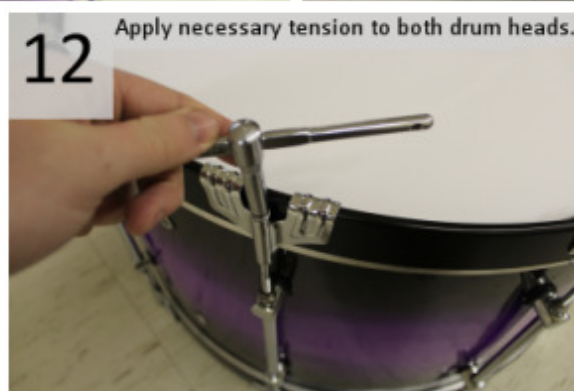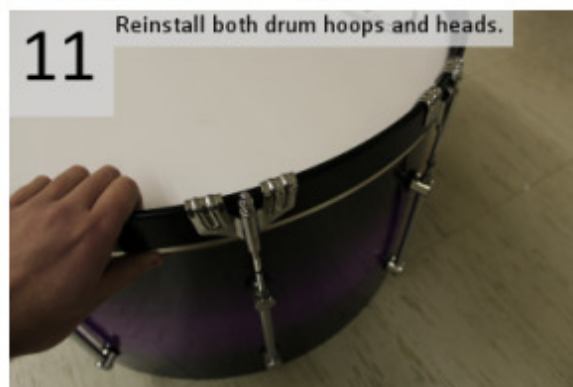

Finished

Installation Complete

