



Mapex Quantum Drum Slip™ Installation Instructions

The instructions in this document apply to the following current model
Mapex Quantum marching snare drums:

14"x12" XT (ON2 Percussion Drum Slip ID: MSQN014)

14"x10" Agility (ON2 Percussion Drum Slip ID: MSQN01410)

**It is highly recommended that you read through this entire
document *BEFORE* attempting to install Drum Slips™.**

Copyright © 2013 ON2 Percussion®
DRUM SLIPS™ ARE PATENT PENDING
Drum Slips™ is a registered trademark of ON2 Percussion
ON2 Percussion is not affiliated with Mapex
www.on2percussion.com

Step One: Preparing Your Drum for Drum Slips™



Continue to the installation process.

4 Open and unroll Drum Slip.



Even though Drum Slips for Mapex snares are split into two sections, the final result is seamless as you can see in the final picture.

5 Before proceeding, **do not** punch out the two stabilizer tabs until step 18.



6 Carefully punch out perforated areas.



7 Drum Slip with all perforations punched out.



8 Begin wrapping the bottom slip around the tension post sleeves and snare mechanism.



9 Tightly pull the Drum Slip together and attach with the included tape runner. (**do not stretch**)





10 If the Drum Slip warps when pinched, it will **NOT** install correctly.



11 The Drum Slip should not warp when pinched; it should fit flush to shell with little or no play.



Step Three: Finalizing the installation of Drum Slips™

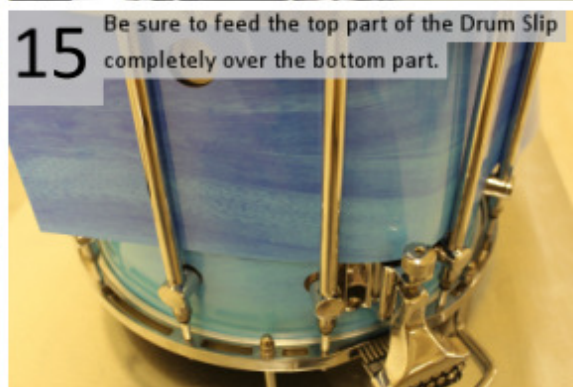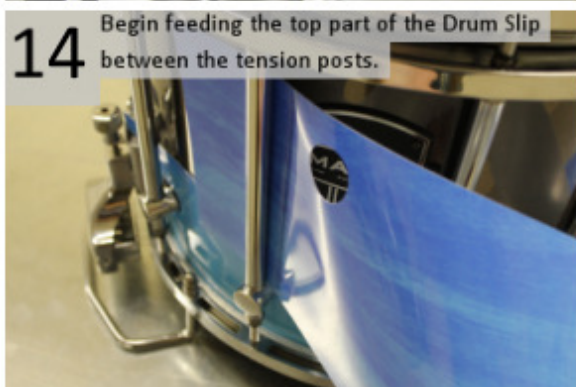

Finished

Installation Complete

